


Large Dispenser Adapter

Adapter Numbers:


- D66008 BT SP-4006 Large Dispenser Adapter

Installation & Loading Instructions:

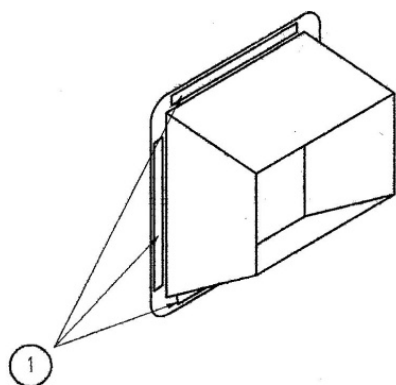


Step 1 –
Open dispenser and
remove existing
spindles. Remove
protective backing
from tape (4 locations)

Step 2 –
Insert Adapter into first
dispenser opening and
press in place

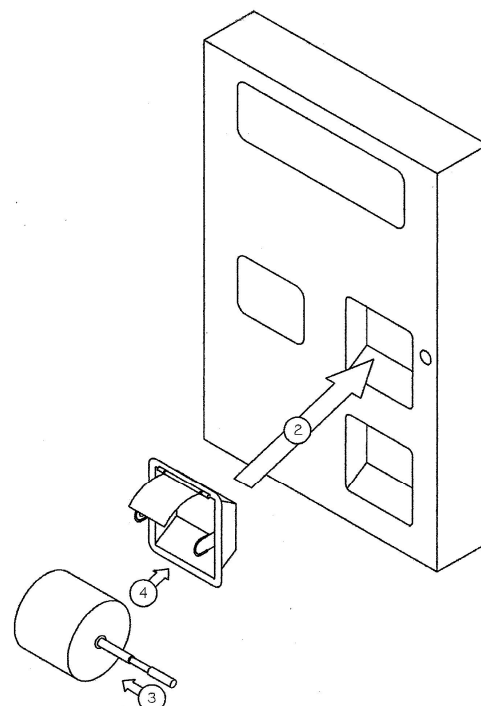

Step 3 –
Insert spindle into the roll
of toilet paper

Step 4 –
Compress Adapter and insert
the
roll of toilet paper into the
adapter

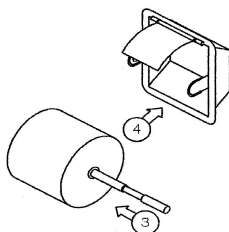

Step 5 –
Repeat steps 1 through 4 for
second position