


## Top – Down Dispenser Adapter – Base Roller Plate

### Adapter Numbers:


- D66003 BT SP-4001 Top - Down Dispenser Adapter (Bobrick)
- D66004 BT SP-4002 Top - Down Dispenser Adapter (ASI)
- D66005 BT SP-4003 Top - Down Dispenser Adapter (Bradley)

## Base Plate Adapter Installation Instructions


### Installation Instructions:

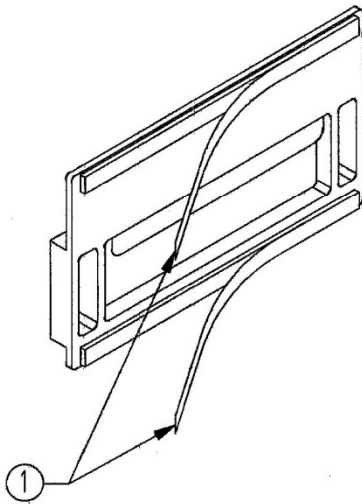

**Step 1 –**  
Remove protective backing  
from tape

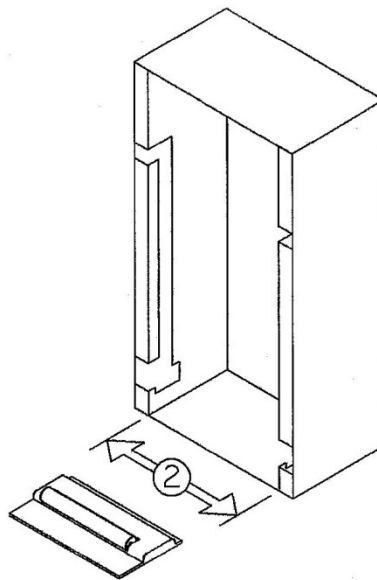

**Step 2 –**  
Center Base Plate between  
the dispenser sidewalls

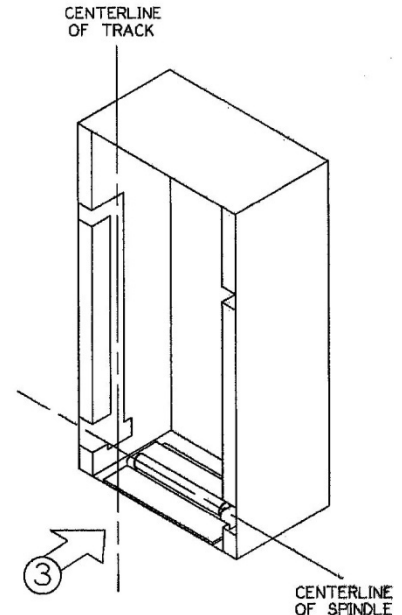

**Step 3 –**  
Center the Base Plate  
Spindle with the centerline  
of the track and press in  
place. You may need to  
rotate the Base Plate 180°  
for best alignment.